

# V720W CAMERA

# Wireless Outdoor Night Vision Camera

Need help? Give us a call.  
**1-877-826-5443**

 
## Required Items

- Camera and power adapter (included)
- Broadband (Cable, DSL, or Fiber Optic) Internet connection with router
- Personal computer or web-enabled tablet
- Login/password for the your Alarm.com account
- A router with Wi-Fi Protected Setup (WPS) button or an Ethernet cable

*If the router does not have a WPS button, and the camera will be connected to a wireless network, you will need the case-sensitive SSID (wireless network name) and the network WEP or WPA key (if encryption is enabled at the router)*

## Installing the Camera

1. Connect the camera's AC adapter and plug it into a non-switched outlet.
2. From a computer or smartphone, connect to the Wi-Fi network named "ALARM (###:###:###)". The numbers in the parenthesis will be the last 6 digits of the camera's MAC.
3. From a web browser type in "http://ADCsetup" and press enter.
4. This should direct you to the camera's internal configuration website. Follow the on-screen instructions to connect the camera onto a wireless network.
5. From a computer on the same network as the camera, login to the customer's account at [www.alarm.com/login](http://www.alarm.com/login).
6. Type [www.alarm.com/addcamera](http://www.alarm.com/addcamera) into the web browser's address bar and follow the on-screen instructions to add the camera into your account.

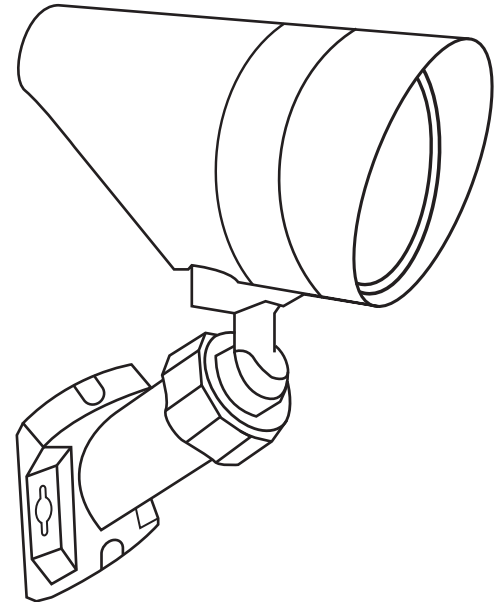

	LED Status	Description
Install	All off	Power off
	Solid Red	Power on, system booting
	Green blink every second	Local network connection with local IP address
	Solid Green	Full internet connection with Alarm.com IP
	Blinking Blue	WPS learn-in mode
	Blinking White	Wi-Fi access point mode
Trouble Conditions	Solid Red	No local or Internet connection
Factory Reset	Red blink every 0.15 second + Green blink every 0.15 second	Restoring factory default settings

V721


# Wireless Outdoor Night Vision Camera

 Need help? Give us a call.  
**1-877-826-5443**


## Enrollment

Plug your camera into an AC outlet.

Connect to your internet through your network. Then go back to your internet settings and connect to the network connection named ALARM###:###:###. This is a very restricted network and will be available only to enroll your camera.

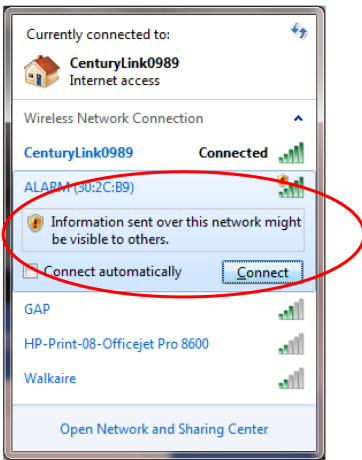

 
While connected to this network, type "http://ADCsetup" into your browser and **press** "enter."




When you see this screen, choose your preferred language



 
**Press** "Scan for WiFi networks."

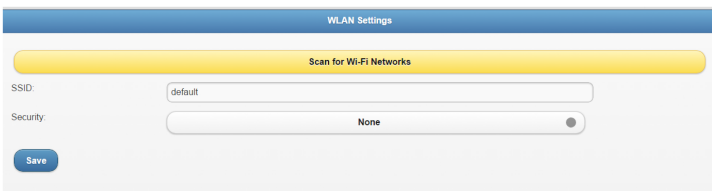

 
You should see a popup like the one below, which includes your home network. **Press** on the radio button to the right of your network.

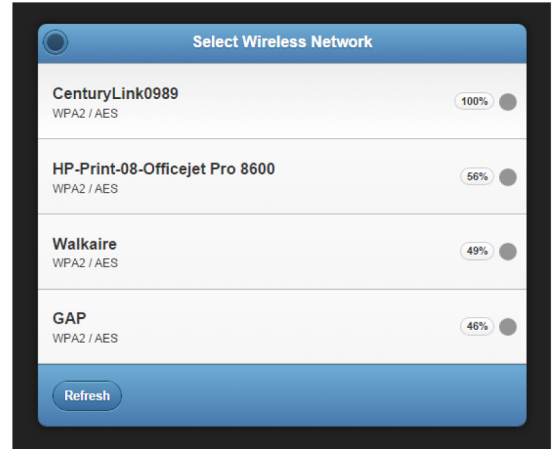

 Now that your network has been chosen, **enter** your Security Key (router password):

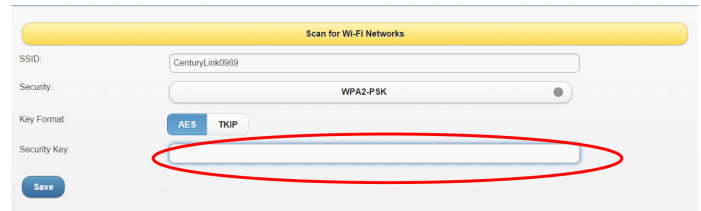

 You will see the following popup. **Click** "OK."

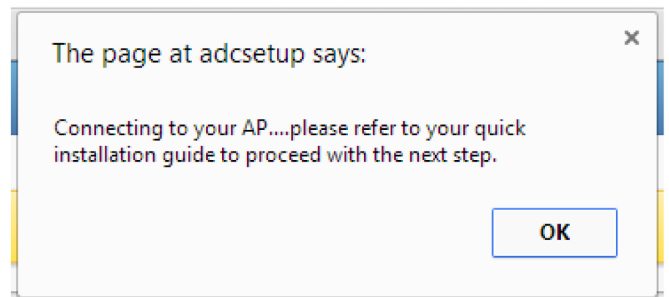


Reconnect to your home's WiFi network and **type** "www.alarm.com/login" into your browser. If your browser tries to autofill with other information, delete everything except what is shown below.



# V721 Wireless Outdoor Night Vision Camera

 Need help? Give us a call.  
1-877-826-5443


Log in to your Alarm.com account with your credentials:

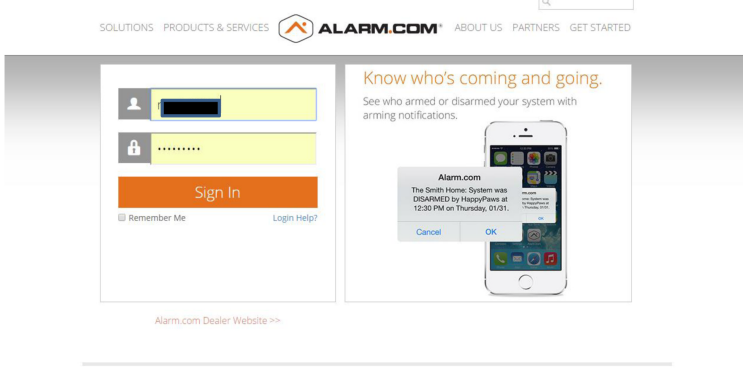


Once you are logged into your account, **type** "www.alarm.com/addcamera" into your browser. **DO NOT** go to your Video tab at this time to add the camera.



 Skip the steps on this page and **click** "Find Video Devices."

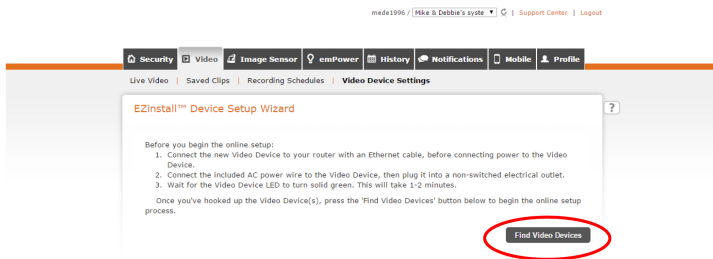

 You will see your new camera listed. Highlight the camera and **click** "Continue."

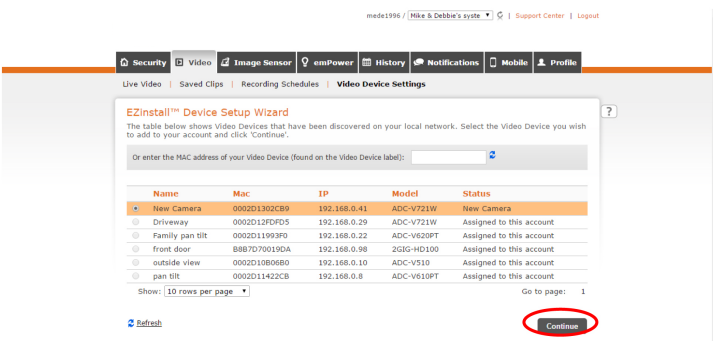

Follow the step by step instructions provided in this online wizard to complete your camera enrollment.

